

DIMENSIONS      CHANGE DIMENSIONS      ON DRAWING


DIMENSIONS = CHANGING ALL THE DIMENSIONS ON A DRAWING

GO TO BOTTOM, RIGHT HAND CORNER :

STEP 1




3

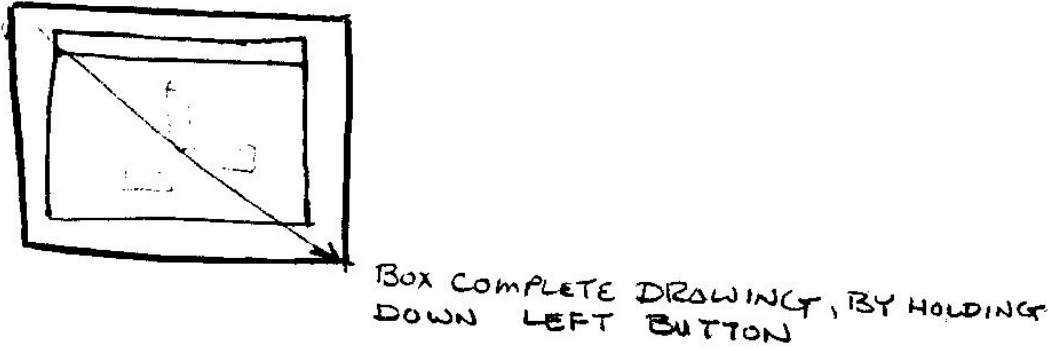

4



5

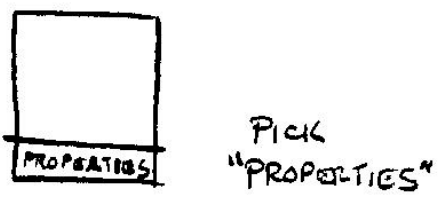

6

