


# PRO-ENGINEER WILDFIRE REFERENCE GUIDE

## Accuracy

Accuracy must be reset if bend allowances fail. This will be clear if a “Flat Pattern” fails to open in a metal part.

### Steps to correct accuracy

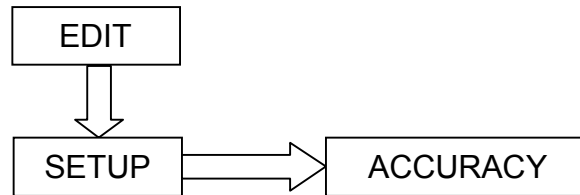

Set accuracy

.0001

Type in: .0001