


PRO-ENGINEER WILDFIRE REFERENCE GUIDE

CURVE LENGTH

CURVES

CURVE LENGTH

THE CURVED LENGTH IS REQUIRED WHEN A RADIUS IS SHOW ON A PART AND THE PART WILL BE REQUIRED TO MADE IN THE FLAT, AND THEN RADIUSED.

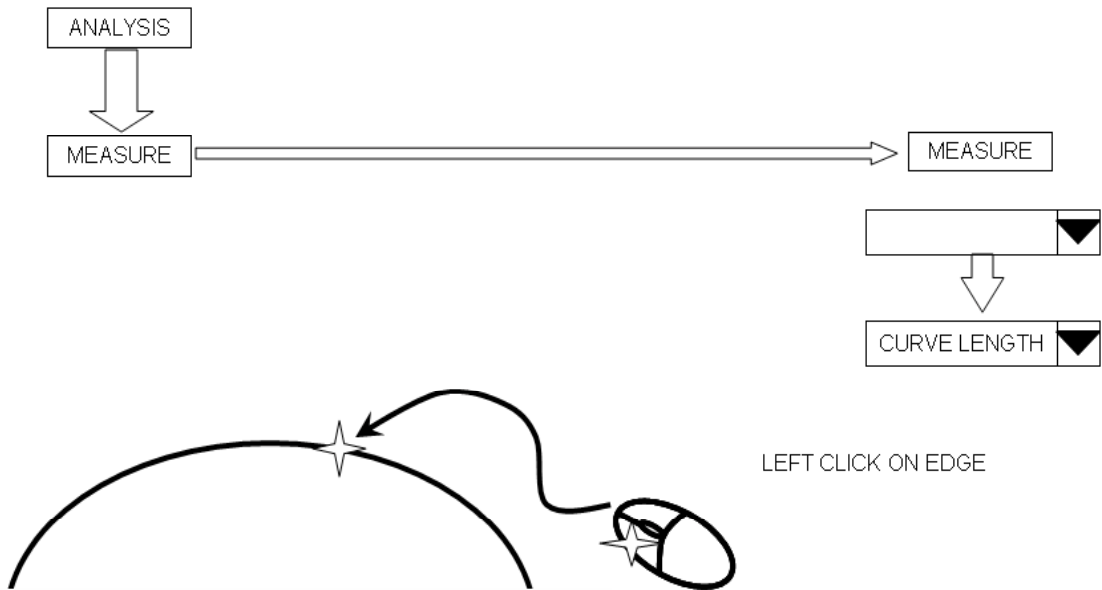

RESULTS

EDGE LENGTH =
49.8911