
PRO-ENGINEER WILDFIRE REFERENCE GUIDE


REDEFINE IN ASSEMBLY

IN ASSEMBLY MODE

YOU WANT TO "REDEFINE" A PART IN THE ASSEMBLY.

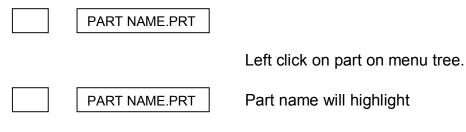

Right click and hold down

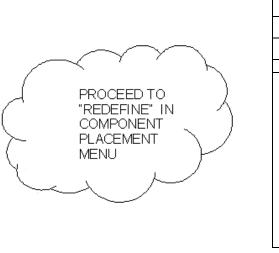

COMPONENT PLACEMENT		
TYPE	OFFSET	
ALIGN	COINCIDENT	⊠∕
ALIGN	.0000	⊠∕
MATE	COINCIDENT	⊠∕
+ COMPONENT REFERENCE N PARTNAME.PRT SURFACE N ASSEMBLY.ASM SURFACE		
OK]	