


PRO-ENGINEER WILDFIRE REFERENCE GUIDE


TO MAKE A VIEW "SOLID" IN A DRAWING

*THIS IS USUALLY DONE ON AN ISOMETRIC DRAWING VIEW

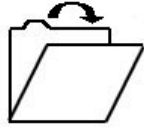

OPEN DRAWING

DRAWING

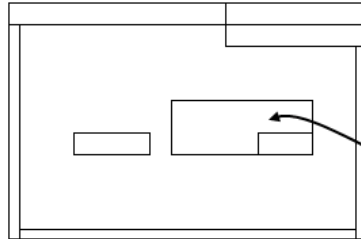

LEFT "DOUBLE CLICK"
ON DRAWING VIEW

DISPLAY MODE

VIEW DISPLAY

NO HIDDEN

TAN PHANTOM

OR

TAN DEFAULT

*YOU WILL SEE IMAGE (VIEW) CHANGE

*WAIT FOR COMPUTER

DONE/RETURN